PRODUCT GUIDE

RESETTING A ROLEC RCBO AFTER TRIPPING/TEST BUTTON USE



Trip switch is **fully down**; power is disabled.



Trip switch is in **upright** position; power is enabled.



Trip switch is **floppy**; RCBO has tripped out & reset required



1. To reset the trip switch, press the switch down using both parts of the switch.



2. The trip switch will click once it is pressed fully down. The switch is now reset.



3. Now the trip switch is **reset**, the power can be enabled by pressing both switches upwards.

